


### Additional Data/Spec Sheet

82 Series – Low Pressure – Push-Lok Fitting - BSP Female Swivel Straight – 60° Cone

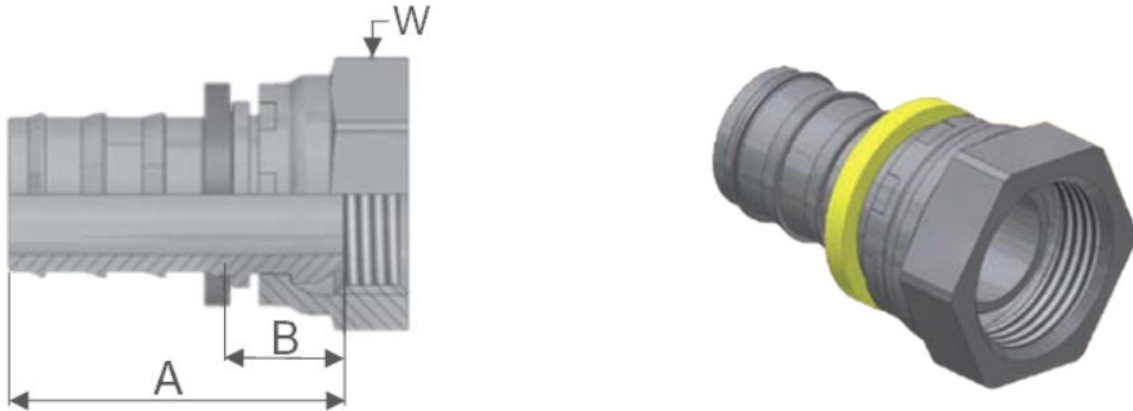


Self-grip Hose Fitting - BS5200-A – DKR – Zinc Plated Carbon Steel



### To be used with Push-Lok Hose or Equivalent Hose

Approved fitting series for hose types:



82 Series Part Number 	Hose I.D. 				Thread BSP 	A mm	B mm	W mm
	DN	Inch	Size	mm				
Fluidco: PL-BSPFS-0404S Parker: 39282-4-4	6	1/4	-4	6,3	1/4x19	33	14	17
Fluidco: PL-BSPFS-0606S Parker: 39282-6-6	10	3/8	-6	9,5	3/8x19	37	14	19

### Industry Applications:

Machine Tools, Paper Industry, Injection Moulding Machines, Chemical Industry, Transfer Lines, Automotive, Blow Forming Machines, Robots, Welding Installations, Power Electronics.

### Main Applications:

Cooling and cutting fluid circuits, Water circuits for tool cooling and temperature control, Compressed air, Leak oil, Water, emulsions and alkalis, Vacuum, Welding gun cooling, Cooling circuits for thyristor controls

### Benefits:


One fitting for all push-lok hoses, Simple assembly without tools or clamps, Long service life, Low assembly cost

## Assembly Instructions



1. Cut the hose right angled with a sharp knife. If necessary it is possible to use a lubricant (water/ soap solution with 5 % soap fluid and 95 % water) for easy assembly.

2. Insert fitting into hose until first barb is in hose. Place end of fitting against a flat object (bench, door, wall) and grip hose approximately 1" from end and push with a steady force until end of hose is covered by yellow plastic collar. Alternatively please use the Parker Assembly Tool No. 611050G.

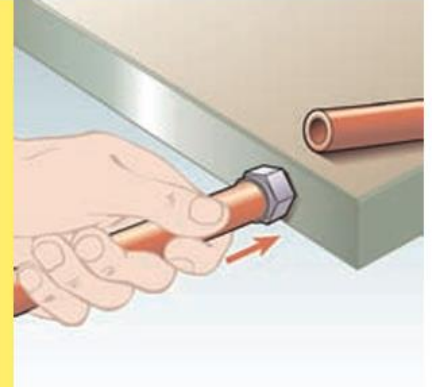


## Attention!

During assembly, please keep in mind that Push-Lok fittings will provide an effective grip only when the Push-Lok hose is pushed fully on the insert, where the cropped end of the hose should be fully concealed by the plastic collar.


**For easy assembly of hose 830M, 837BM and 837PU please use only Push-Lok Assembly Oil No. H896137.** Push-Lok Assembly Oil is free from wetting disturbing substances. Don't use oil, lubricant or soap fluids for this hose!

## Disassembly Instructions

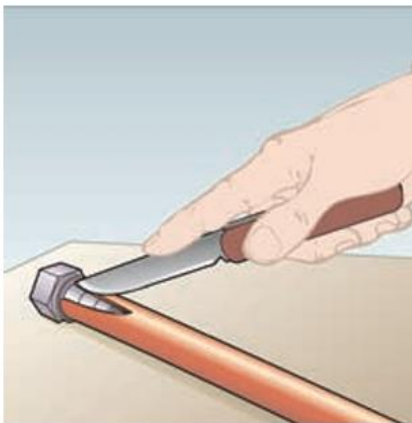

1. Cut lengthwise along a line at approximately a 20 angle from centre line of hose. The cut should be approximately 1" long. Be careful not to nick barbs when cutting the hose.

2. Grip hose and give a sharp down-ward tug to disengage from fitting.

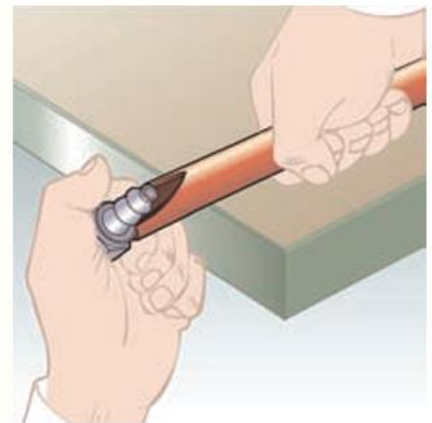

## Attention!

Before re-use of the nipple please check nipple for damage. Damaged nipples can cause leakage.