

## Additional Data/Spec Sheet

LP Brass Adapter Fittings – NPT Male x NPT Male Hex Reducing Nipple


# 216P

## Hex Nipple Reducers



| Part Number | Pipe Thread 1 | Pipe Thread 2 |
|-------------|---------------|---------------|
| 216P-4-2    | 1/4           | 1/8           |
| 216P-6-2    | 3/8           | 1/8           |
| 216P-6-4    | 3/8           | 1/4           |
| 216P-8-4    | 1/2           | 1/4           |
| 216P-8-6    | 1/2           | 3/8           |
| 216P-12-8   | 3/4           | 1/2           |

### Hex Nipple Reducers 216P

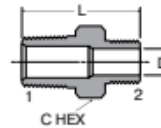

| PART NO.  | 1 PIPE THREAD | 2 PIPE THREAD | C HEX  | L    | FLOW DIA. D |
|-----------|---------------|---------------|--------|------|-------------|
| 216P-4-2  | 1/4           | 1/8           | 9/16   | 1.19 | .220        |
| 216P-6-2  | 3/8           | 1/8           | 11/16  | 1.22 | .220        |
| 216P-6-4  | 3/8           | 1/4           | 11/16  | 1.41 | .314        |
| 216P-8-4  | 1/2           | 1/4           | 7/8    | 1.62 | .314        |
| 216P-8-6  | 1/2           | 3/8           | 7/8    | 1.62 | .440        |
| 216P-12-8 | 3/4           | 1/2           | 1-1/16 | 1.80 | .564        |

## Assembly Instructions

### Straight Fittings

1. Hand tighten external thread into internal thread
2. Tighten an additional 2 turns with a wrench up to 1/2" male pipe thread.
3. Above 1/2" 1 1/2 to 2 1/2 turns.